WIRELESS MICROPHONE
QUICK START GUIDE



SPECIFICATIONS:

1. Frequency range: 510-530 MHz
2. Channels: 20ch/each channel
3. RF power: <10dBm
4. Frequency response: 40Hz-18kHz
5. T.H.D: <0.03%
6. Mic/Receiver Battery: Lithium battery 602040 3.7V/450mAh
7. Mic And Receiver Charging Time: 1.5 hours
8. Mic Battery Life: 6.5 hours
9. Receiver Battery Life: 6.5 hours
10. Working distance: 20m

PRODUCT INFORMATION:

The Silent Sound System Wireless Microphone is designed for high performance and ease of use. With a frequency range of 510-530 MHz and 20 channels per channel, this microphone offers reliable wireless connectivity for various applications.

PRODUCT USAGE INSTRUCTIONS:

GETTING STARTED

- Insert batteries into the microphone and receiver.
- Power on both the microphone and receiver.
- Ensure the microphone and receiver are on the same channel.

ADJUSTING SETTINGS

- Use the controls on the receiver to adjust volume levels.
- Select the desired channel on both the microphone and receiver for optimal performance.

USING THE MICROPHONE


- Hold the microphone at an appropriate distance from your mouth for clear audio.
- Speak directly into the microphone for best sound quality.
- Avoid obstructing the microphone's capsule for uninterrupted signal transmission.

OPERATING ENVIRONMENTS & WARNING


- When using this device, keep it away from water.
- Use the device in ventilated environment, keep it away from fire.
- Since it's a wireless device, please keep it away from other interfering sources.
- Don't take apart the device.
- Please use the standard power supply, high voltage may damage the device.
- When the battery is low, the mic or receiver will automatically shut down. Please charge it.
- Recommended to use the original charging cable for all charging equipment.
- Not recommended to use equipment while charging.

FLIP FOR INSTALLATION

INSTALLATION:

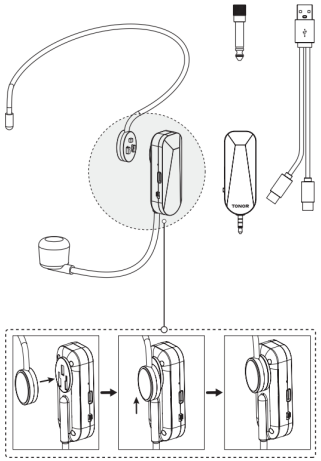

TRANSMITTER OPERATION INSTRUCTION

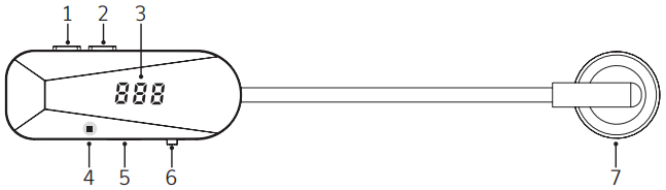


1. Long press for 5 seconds to switch to pairing mode.
    - *When adjusting the volume, the screen will display from U00 to U10.*
    - *When adjusting the frequency, the screen will display from C01 to C20.*
2. Long press for 3 seconds to switch display modes (Frequency mode/Volume mode/Power mode)
    - *When adjusting the volume, the screen will display from U10 to U00.*
    - *When adjusting the frequency, the screen will display from C20 to C01.*
3. Display screen
4. Charging indicator light
5. TYPE-C Charging Interface
6. Switch
7. Microphone

DISPLAY SCREEN

C20	Frequency display	Long press "-" to switch.
U10	Volume display	
- - -	Battery display	
PA	Pairing mode	Long press "+" to pair.

RECEIVER INSTRUCTIONS

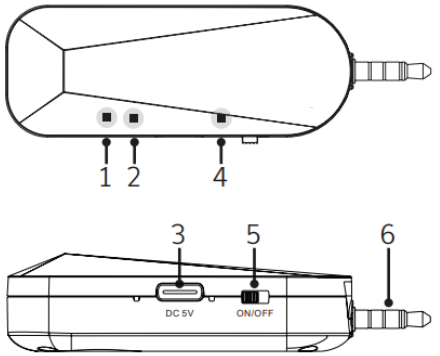

1. Charging indicator
    - *Red light turns on when charging, turns off when fully charged.*
2. Connection indicator
    - *Blue light turns on when microphone is successfully connected, turns off when not connected.*
3. TYPE-C Charging Interface
4. Power indicator
    - *Green light when powered on, off when powered off.*
5. Switch
6. 3.5mm plug

NEED TO FIT STEPS TO PAIR/TROUBLESHOOTING